



Cindy's Jumpers Nacho Cheese Dispenser Rental Operating Instructions

INSTALLATION

1. Place the unit in a prominent location on a level counter, where the nacho machine will attract attention.
2. Precaution should be taken so customers do not come in contact with the hot unit.
3. Plug the power cord into a suitable (20 amp) 120 volt outlet that can provide the required wattage. Having other appliances on a circuit, may prevent your unit from receiving the necessary voltage.

GENERAL OPERATING PROCEDURES

1. Place the nacho cheese bag inside the nacho cheese dispenser machine. See the nacho cheese bag instructions for property cheese bag installation.
2. The machine has three buttons for different dispensing amounts.
3. One bag of cheese will normally serve 70 – 2oz servings.

NOTE:

Make sure that the door secures fully. If the door does not close fully the machine will not work properly. The machine has magnets at the door and it will not begin to warm the cheese until the machine is fully secured.

COOKING

The cheese will take approximately 30-45 minutes to fully warm up. The machine will not dispense cheese until it reaches 140 degrees in temperature.

CLEANING

No Cleaning is required just empty out the empty cheese bag.