



Cindy's Jumpers Nacho Chip Warmer Rental Operating Instructions

INSTALLATION

1. Place the unit in a prominent location on a level counter, where the nacho chips will attract attention.
2. Precaution should be taken so customers do not come in contact with the hot unit.
3. Plug the power cord into a suitable 120 volt outlet that can provide the required wattage. Having other appliances on a circuit, may prevent your unit from receiving the necessary voltage.

Electrical: 120 volt, 60 hertz, single phase, 155watts, 7 amps

GENERAL OPERATING PROCEDURES

1. Care should be used when loading chips into this merchandiser/warmer to prevent breakage.
2. A stainless steel chute is provided to help control breakage. Serving is accomplished by opening the lexan door and scooping chips into an appropriate serving container.
3. A warmer element is located under the stainless steel bottom of the unit that gently warms the food product. Turn "ON" the side mounted switch to activate this element and the lamp.

NOTE: When you turn the switch to the "OFF" position, you turn off the heating element.

CLEANING

No Cleaning is required just empty out all the leftover nachos.